

铜版纸110克，双面印刷，尺寸335x170mm，五折六页，风琴折再上下对折


ACEBEAM
Light Where You Want It

User Manual



T35 Compact Rechargeable
Tactical Flashlight

PRODUCT OVERVIEW

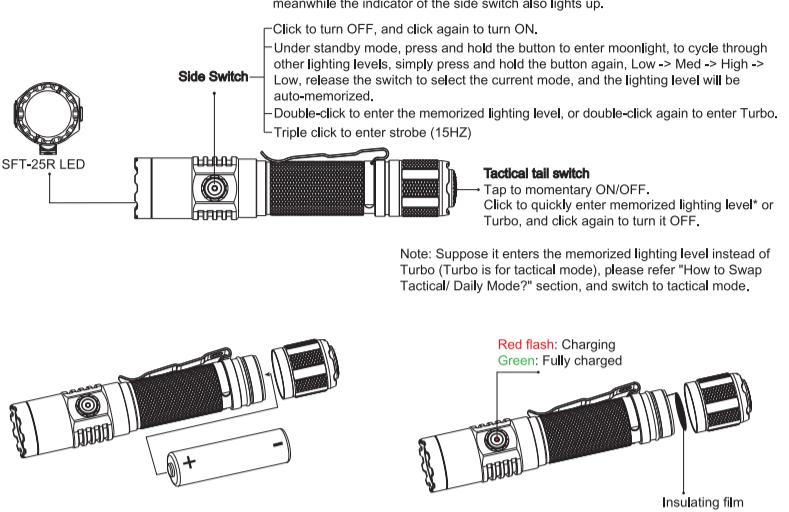

Note: Before pushing the side switch, be sure to press the tail switch first to turn it on, meanwhile the indicator of the side switch also lights up.

Click to turn OFF, and click again to turn ON.
Under standby mode, press and hold the button to enter moonlight, to cycle through other lighting levels, simply press and hold the button again, Low->Med->High->Low, release the switch to select the current mode, and the lighting level will be auto-memorized.
Triple click to enter the memorized lighting level, or double-click again to enter Turbo.

Tactical tail switch

Tap to momentary ON/OFF.
Click to quickly enter memorized lighting level* or Turbo, and click again to turn it OFF.

Note: Suppose it enters the memorized lighting level instead of Turbo (Turbo is for tactical mode), please refer "How to Swap Tactical/Daily Mode?" section, and switch to tactical mode.

Red flash: Charging

Green: Fully charged



2. 首先按住侧按键，再点击尾部总开关，即可进行战术和日用模式切换。
1. 充电时间约3小时可充满。

2. 可支持边充边照明。当前档位高于中亮档时，强制降到中亮档(侧按键开/关机)。

电量指示

绿灯: 大于30%;
红灯: 30%到10%之间, 此时低电量提醒;
红闪: 小于10%;
电压并低于2.7V, 手电将会自动关机。

(DE)Deutsch

BEDIENUNGSANLEITUNG

Heckschalter

Leichtes Antippen: Sofortiges Einschalten/Ausschalten.

Seitentaste

Hinweis: Ein Schalten mit einem Klick auf den Heckschalter.

Einfacher Klick: Ausschalten/Einschalten.

Halten Sie im Standby-Modus die Taste gedrückt, um das Mondlicht einzuschalten. Um durch andere Beleuchtungstufen zu schalten, halten Sie die Taste einfach erneut gedrückt.

Langes Drücken: Niedrig-Mittel-Hoch-Niedrig, in dieser

Reihenfolgezyklisch. Loslassen wählt den aktuellen Modus, die Taschenlampe hat eine Speicherfunktion für die Einstellung.

Doppelklick: Wechselt in den gespeicherten Modus/Ultra-Helligkeit.

Dreifachklick: Strobe-Modus.

Wie wechselt man zwischen taktischem und alltäglichem Modus?

Schalten Sie die Taschenlampe mit einem Klick auf den Heckschalter aus;

Halten Sie gleichzeitig die Seitentaste und den Heckschalter gedrückt, um zu wechseln.

FEATURES

- Luminus SFT-25R LED with 50,000-hour lifespan
- Max out of 1400 lumens, throw up to 380m
- Included with 1 x 18650 2600mAh Li-ion rechargeable battery, compatible with 2 x CR123A 3V non-rechargeable batteries
- Power indicator displays the remaining battery level
- Features compatible with a tactical finger ring slot (optional)
- High-efficiency constant current circuit ensures stable brightness
- Dual-switch design for 5 brightness levels and special mode (Strobe function)
- Utilizes scratch-resistant coated optical lens with a light transmittance rate of up to 99%
- Premium type HAIID had-anodized anti-abrasive finish
- Impact resistance: 1M, Waterproof: IP68, underwater 2m
- Size: 137.5mm/5.41" (Length) x 26.9mm/1.05" (Ø Head) x 23.0mm/0.90" (Height)
- Weight: 138g/4.86oz (including battery)

TECHNICAL PARAMETER

R1 STANDARD	SFT-25R 6500K					
	Turbo	High	Mid	Low	Ultra-Low	Strobe
1400+ lumens	700	330	85	2	1400-700 lumens	1400-700 lumens
60s+ 1h30min	1h	3h	50min	16h	400h	3min+ 3h
380m	276m	187m	96m			380m
36100cd	19044cd	8742cd	2304cd			36100cd
				IP68		1.5 meters

Notice: The above-mentioned parameters (tested with 18650 2600mAh battery) have been measured in accordance with the international flashlight testing standard ANSI/PLATO FL1, and are approximate and may vary from flashlights, batteries, and environments. If you have any questions, please contact customer service.

(EN) English

OPERATIONS

Tactical Tail Switch

Tap to momentary ON/OFF.
Click to quickly enter memorized lighting level* or Turbo, and click again to turn it OFF.

Note: Suppose it enters the memorized lighting level instead of Turbo (Turbo is for tactical mode), please refer "How to Swap Tactical/Daily Mode?" section, and switch to tactical mode.

Side Switch

Note: Before pushing the side switch, be sure to press the tail switch first to turn it ON, meanwhile the indicator of the side switch also lights up.

Under standby mode, press and hold the button to enter moonlight, to cycle through other lighting levels, simply press and hold the button again, Low->Med->High->Low, release the switch to select the current mode, and the lighting level will be auto-memorized.

Double-click to enter the memorized lighting level, or double-click again to enter Turbo.

Triple click to enter strobe (15HZ).

Note: Suppose turn the light off with the side switch, the indicator will show intermittent lighting ON and OFF, which tells that it is now under standby mode.

How to Swap Tactical/Daily Mode?

1. Click the tail switch to turn OFF, and the side switch indicator light will go out;

2. Press and hold the side switch at first, and then press the tail switch, now, you can freely shift from daily mode to tactical mode, and vice versa.

CHARGING TIPS

- Charging time is about 3 hours for a full charge.
- It supports charging while providing illumination. When the current mode is higher than medium brightness, it will be forced to switch to medium brightness mode. (Power on/off with side switch)

LOW-VOLTAGE WARNING

Green light: > 30%
Red light: among 30%~10%, low battery warning

Red flash light: < 10%
The light would be turned off when the voltage is below 2.7V

(CN) 简体中文

操作步骤

尾部开关

轻触：瞬间点亮/关闭。

单击：进入记忆亮度档位*/一键极亮，再次单击关闭。

备注：在使用过程中，当您单击尾部总开关，如果手电进入记忆亮度档位（即没有进入战术模式的极亮档），那么您可以参照“如何进行战术/日用模式切换？”一栏，切换到战术模式，即可启动一键极亮。

侧按键

备注1：在进行侧键操作之前，请按一下尾部总开关以进入开机状态，此时手电点亮，且侧按键指示灯也亮。

单击：开启/点亮。

长按：待机状态时，长按进入月光档，松开即进入月光档模式。

当进入月光档模式后，再次长按将进入档位循环。低-中-高-低，松开即确定当前亮度模式。本手电具有亮度档位记忆功能。

双击：进入记忆亮度档位，或再次双击进入极亮。

三击：短按15HZ。

备注2：通过点击侧按键关闭手电时，侧按键上的指示灯会进入间歇性点亮或关闭状态，以表示手电进入待机状态。

如何进行战术/日用模式切换？

1. 点击尾部总开关手电，此时侧按键指示灯熄灭；

注意事项

注意：尾部开关在进行侧键操作之前，请按一下尾部总开关以进入开机状态，此时手电点亮，且侧按键指示灯也亮。

单击：开启/点亮。

长按：待机状态时，长按进入月光档，松开即进入月光档模式。

当进入月光档模式后，再次长按将进入档位循环。低-中-高-低，松开即确定当前亮度模式。本手电具有亮度档位记忆功能。

双击：进入记忆亮度档位，或再次双击进入极亮。

三击：短按15HZ。

备注2：通过点击侧按键关闭手电时，侧按键上的指示灯会进入间歇性点亮或关闭状态，以表示手电进入待机状态。

充电

注意：尾部开关在进行侧键操作之前，请按一下尾部总开关以进入开机状态，此时手电点亮，且侧按键指示灯也亮。

单击：开启/点亮。

长按：待机状态时，长按进入月光档，松开即进入月光档模式。

当进入月光档模式后，再次长按将进入档位循环。低-中-高-低，松开即确定当前亮度模式。本手电具有亮度档位记忆功能。

双击：进入记忆亮度档位，或再次双击进入极亮。

三击：短按15HZ。

备注2：通过点击侧按键关闭手电时，侧按键上的指示灯会进入间歇性点亮或关闭状态，以表示手电进入待机状态。

电池

注意：尾部开关在进行侧键操作之前，请按一下尾部总开关以进入开机状态，此时手电点亮，且侧按键指示灯也亮。

单击：开启/点亮。

长按：待机状态时，长按进入月光档，松开即进入月光档模式。

当进入月光档模式后，再次长按将进入档位循环。低-中-高-低，松开即确定当前亮度模式。本手电具有亮度档位记忆功能。

双击：进入记忆亮度档位，或再次双击进入极亮。

三击：短按15HZ。

备注2：通过点击侧按键关闭手电时，侧按键上的指示灯会进入间歇性点亮或关闭状态，以表示手电进入待机状态。

故障排除

注意：尾部开关在进行侧键操作之前，请按一下尾部总开关以进入开机状态，此时手电点亮，且侧按键指示灯也亮。

单击：开启/点亮。

长按：待机状态时，长按进入月光档，松开即进入月光档模式。

当进入月光档模式后，再次长按将进入档位循环。低-中-高-低，松开即确定当前亮度模式。本手电具有亮度档位记忆功能。

双击：进入记忆亮度档位，或再次双击进入极亮。

三击：短按15HZ。

备注2：通过点击侧按键关闭手电时，侧按键上的指示灯会进入间歇性点亮或关闭状态，以表示手电进入待机状态。

保养

注意：尾部开关在进行侧键操作之前，请按一下尾部总开关以进入开机状态，此时手电点亮，且侧按键指示灯也亮。

单击：开启/点亮。

长按：待机状态时，长按进入月光档，松开即进入月光档模式。

当进入月光档模式后，再次长按将进入档位循环。低-中-高-低，松开即确定当前亮度模式。本手电具有亮度档位记忆功能。

双击：进入记忆亮度档位，或再次双击进入极亮。

三击：短按15HZ。

备注2：通过点击侧按键关闭手电时，侧按键上的指示灯会进入间歇性点亮或关闭状态，以表示手电进入待机状态。

保修

注意：尾部开关在进行侧键操作之前，请按一下尾部总开关以进入开机状态，此时手电点亮，且侧按键指示灯也亮。

单击：开启/点亮。

长按：待机状态时，长按进入月光档，松开即进入月光档模式。

当进入月光档模式后，再次长按将进入档位循环。低-中-高-低，松开即确定当前亮度模式。本手电具有亮度档位记忆功能。

双击：进入记忆亮度档位，或再次双击进入极亮。

三击：短按15HZ。

备注2：通过点击侧按键关闭手电时，侧按键上的指示灯会进入间歇性点亮或关闭状态，以表示手电进入待机状态。

其他

注意：尾部开关在进行侧键操作之前，请按一下尾部总开关以进入开机状态，此时手电点亮，且侧按键指示灯也亮。