


铜版纸157克, 双面印刷, 尺寸306x90mm, 五折六页, 风琴折

ACEBEAM
Light Where You Want It

User Manual

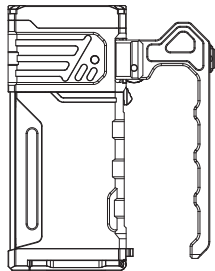

X35 Multi-Light Powerful Searching Flashlight

FEATURES

Two LED Options

- 3 x CREE XHP70.2 6500K LEDs, delivering up to 20,000 lumens with a beam reach of 458 meters.
- 3 x CREE XHP70.3 6500K LEDs, delivering up to 18,000 lumens with a beam reach of 551 meters.

Multi-Light Auxiliary Side Light

- Provides white light mode for illumination, RGB mode for warming and creating ambiance, and full-color mode with eight signal lights.

Reliable Power System

- Powered by two 21700 5000mAh Tabless batteries.
- 30A continuous discharge for sustained power.
- Triple balanced protection technology keeps it safe, stable, and evenly matched.
- The USB-C port cover is precision-crafted from metal, stronger, more durable.
- Swap fresh batteries to extend the runtime instead of waiting for a recharge.

Convenient Operation

- Dual switches. One for main light, one for side light.
- Fast, intuitive, and stress-free.
- With the handle attached, use the handle button without moving your grip to control the light. With the handle removed, the main switch is still quick and natural.
- Magnetic tail cap for hands-free operation allows you to work with both hands.

Built to Endure

- Crafted from aerospace-grade AL6061-T6 aluminum and a hard-anodized finish to survive 1-meter drops. Its IP66 rated protection means powerful jets of water won't get in.

Size and Weight

- Length: 134.5 mm/5.30 in
- Top Width: 60 mm/2.36 in
- Bottom Width: 63.5 mm/2.5 in
- Weight: 430.51g/15.19oz(Including Batteries and Excluding Handle)

INCLUDED

- 1 x X35; 2 x 21700 Batteries; 1 x USB-C Charging Cable; 1 x Lanyard; 2 x Waterproof O-rings; 1 x User Manual; 1 x Warranty Card; 1 x Qualification Certificate

TECHNICAL PARAMETER

3 x XHP70.2 LEDs									
MODE	Turbo	High	Med2	Med1	Low	Ultra-Low	Strobe		
18000 lumens	3000~2000 lumens	1050 lumens	500 lumens	120 lumens	40 lumens	2000~3000 lumens			
10min+2h+40min	5.1h	11.5h	38h	58h	1min+3h				
458m	142m	84m	56m	25m	15m	458m			
52441 cd	5041 cd	1764 cd	784 cd	156 cd	56 cd	52441 cd			

3 x XHP70.3 LEDs									
MODE	Turbo	High	Med2	Med1	Low	Ultra-Low	Strobe		
18000 lumens	3000~2000 lumens	1050 lumens	500 lumens	120 lumens	40 lumens	18000~3000 lumens			
10min+2h+40min	5.1h	11.5h	38h	58h	1min+3h				
551m	179m	107m	72m	35m	20m	551m			
75900 cd	8010 cd	2862 cd	1296 cd	306 cd	100 cd	75900 cd			

IP66	1 meter
------	---------

Notice: The above-mentioned parameters (tested with 2 x ACEBEAM 21700 batteries) have been measured in accordance with the international flashlight testing standard ANSI PLATO FL1, and are approximate and may vary from flashlights, batteries, and environments. If you have any questions, please contact customer service. Turbo mode features step-down protection, this is normal behavior.

OPERATING INSTRUCTION

Main Light Switch

Single Press: Turn on/off; turns on at the memorized setting(excluding Ultra Low, Turbo, Strobe).

Long Press:

While off, hold for 3s to lock both switches.

While off, hold for 0.5s to enter Ultra Low.

While on, hold to cycle through Low, Med 1, Med 2, High.

Single Press and Long Press: Turbo; release to return to the previous setting.

Triple Press: Strobe

Quadruple Press: Unlock while locked.

Auxiliary Light Switch

White Light Mode:

While off, single press to enter White Light(default starts at Low). Single press again to turn off.

While on, long press to cycle through Low, Med, High; double press to enter Turbo.

RGB Mode:

While off, double press to enter RGB Mode(memorized setting). Single press again to turn off.

While on, long press to cycle through Bidirectional Flow, Meteor Shower, Arrow Indicator.

Full Color Mode:

While off, long press to enter Full Color Mode(excluding white light; remembers the last used setting). Long press again to turn off.

While on, single press to cycle through SOS, Beacon Strobe, Fast Strobe, Equal Flash, Slow Strobe, Pulse, Half Flash, Bounce.

Single press and long press to change color(excluding white light).

Double press to quickly enter SOS.

Triple press to enter Constant-On.



BATTERY INSTALLATION



Red: Charging

Green: Fully charged

USB-C CHARGING INDICATOR



WARNING

1. CAUTION! Possible dangerous radiation! Don't look into the light! May be dangerous for your eyes.

2. By using this device, you certify you have read the included User Manual and Warning Card and release the manufacturer and retailers from all liabilities.

3. Please use in accordance with applicable laws and regulations.

4. Quality batteries with circuit protection will reduce the potential risk.

5. Do not aim this light directly at eyes or exposed skin to prevent injuries. Keep this flashlight out of the reach of children.

USAGE AND MAINTENANCE

1. Unauthorized disassembly may damage the light and void the warranty.

2. This is normal case the light will accumulate a lot of heat when used on Turbo output levels for extended periods.

3. Lubricate the threads with professional grade lubricant regularly.

4. Please swap out the O-rings regularly to maintain the water resistance level.

5. Maintain and keep clean any contact surfaces of the flashlight with alcohol swab. This may prevent irregular flashes during use.

6. Remove batteries during storage. Keep lithium-ion batteries charges approximately every 4 months.

7. Rated IP66, it resists powerful water jets, but must not be submerged in water.

PRODUCT WARRANTY

1. We replace any quality defective lights within 15 days of purchase.

2. We offer warranty within 10 years of purchase if problems develop with normal use for LED model.

3. Limited lifetime warranty, we charge for replacement parts.

4. The warranty does not cover damage or failure caused by:

A. Rough usage or operation which does not comply with the user manual or product specifications.

B. Unauthorized disassembly, repair or modification. Defects or damaged caused by factors out of Acebeam's control.

C. Battery leakage damaged products.

5. If there are any questions about ACEBEAM products, please consider the warranty and contact Acebeam or your original Acebeam dealer for warranty return instructions.

Email: info@acebeam.com

DISCLAIMER CLAUSE


Acebeam is not liable for damages or injuries sustained resulting from the usage of the product inconsistent with the warnings in the manual.



ACEBEAM TECHNOLOGY CO., LTD
+86-0755-23036551
www.acebeam.com
info@acebeam.com
3/F, No.2 Building, Yijiang Industrial Park, Dalang, Longhua, Shenzhen 518100, Guangdong, China
Copyright © ACEBEAM. All rights reserved.
Powered by Acebeam Technology Co., Ltd

ACEBEAM
Light Where You Want It

说明书

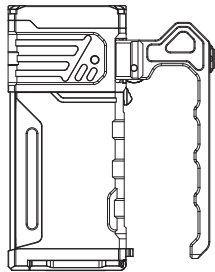

X35

多光源强光搜救手电

产品特性

提供两款灯珠可选

- 3 x CREE XHP70.2 6500K LED灯珠, 输出可达20000流明, 射距可达458米
- 3 x CREE XHP70.3 6500K LED灯珠, 输出可达18000流明, 射距可达551米

多光源辅助侧灯

- 提供白光模式照明、RGB模式用于警示与营造氛围, 全彩模式含八种信号灯。

可靠供电系统

- 采用两节21700 5000mAh全极耳高倍率电池, 30A持续放电, 动力强劲
- 三重均衡保护技术, 安全稳定
- USB-C保护盖为金属打造, 更坚固耐用
- 可更换电池设计, 换上新电池即可续航无忧, 无需等待充电

便捷操作

- 双开关设计, 主灯与侧灯独立控制, 快速直观, 无操作压力
- 安装手柄后, 无需改变握持姿势即可使用手柄按键控制主灯; 拆下手柄时, 主开关依然快速自然
- 磁吸尾盖, 解放双手, 方便同时进行其他操作

坚固耐用

- 采用航空级AL6061-T6铝合金及硬质阳极氧化处理, 可承受1米跌落
- IP66防护等级, 可承受恶劣环境

尺寸与重量

- 长度: 134.5 mm
- 顶部宽度: 60 mm
- 底部宽度: 63.5 mm
- 重量: 430.51g(含电池不含手柄)

包装清单

- 1x X35手电筒; 2x ACEBEAM 21700 电池; 1x 手柄;
- 1x Type-C充电线; 2x 防水O圈; 1x 说明书; 1x 保修卡;
- 1x 合格证;

性能参数

3 x XHP70.2 LEDs									
MODE	极亮	高亮	中亮2	中亮1	低亮	极低亮	爆闪		
20000流明	3000~2000流明	1050流明	500流明	120流明	40流明	20000~3000流明			
10分钟+2小时+40分钟	5.1小时	11.5小时	38小时	58小时	1分钟+3小时				
458米	142米	84米	56米	25米	15米	458米			
52441坎德拉	5041坎德拉	1764坎德拉	784坎德拉	156坎德拉	56坎德拉	52441坎德拉			

3 x XHP70.3 LEDs									
MODE	极亮	高亮	中亮2	中亮1	低亮	极低亮	爆闪		
18000流明	3000~2000流明	1050流明	500流明	120流明	40流明	18000~3000流明			
10分钟+2小时+40分钟	5.1小时	11.5小时	38小时	58小时	1分钟+3小时				
551米	179米	107米	72米	35米	20米	551米			
75900坎德拉	8010坎德拉	2862坎德拉	1296坎德拉	306坎德拉	100坎德拉	75900坎德拉			

IP66	1米
------	----

注: 以上数据按照国际手电筒测量标准ANSI PLATO FL1所述之测量方法, 所用电池为2节ACEBEAM 21700电池, 以上数据为ACEBEAM实验室实测, 具体使用需要视实际环境而定, 如有疑问请联系客服。极亮档位有降额保护, 此为正常情况。

操作步骤

主灯开关

单击: 开/关; 开启时使用记忆档位 (不包括极低亮、极亮、爆闪)。

长按: 关机状态下, 长按3秒同时锁定双按键。

关机状态下, 长按0.5秒进入极低亮。

开机状态下, 长按可循环切换: 低亮 → 中亮1 → 中亮2 → 高亮。

单击并长按: 进入极亮; 松开后恢复之前档位。

三击: 爆闪

四击: 在锁定状态下解锁。

辅灯开关

白光模式: 关机状态下, 单击进入白光模式 (默认打开低亮)。再次单击关机。

开机状态下, 长按循环切换: 低亮 → 中亮 → 高亮; 双击进入极亮。

开机状态下, 长按循环切换: 低亮 → 中亮 → 高亮; 双击进入极亮。

RGB模式:

关机状态下, 双击进入 RGB 模式 (记忆关机前的档位)。再次单击关机。

开机状态下, 长按循环切换: 双向流光 → 流星雨 → 箭头指示模式。

全彩模式:

关机状态下, 长按进入全彩模式 (不含白光, 记忆关机前的档位)。再次长按关机。

开机状态下, 单击循环切换: SOS → 信标闪 → 快闪 → 等频闪 → 慢闪 → 脉冲 → 半闪 → 跳动闪。

单击并长按: 切换颜色 (不含白光)。

双击: 快速进入 SOS。

三击: 常亮。



电池安装指示

确保插入电池时正负极(+)端指向头部。



USB-C充电指示灯

警告

- 使用前请先仔细阅读包装内的说明书和警告标签, 并确定已经熟知并遵守。
- 推荐使用合格且带有电路保护的电池。
- 严禁在手电点亮时直接照射眼睛及皮肤, 以免造成视力损伤或皮肤灼伤, 并远离儿童。

4. 使用者需按当地法律法规及相关注意事项操作, 出现任何法律问题与制造商及销售商无关。

5. 禁止近距离直视本产品光斑, 以免对眼睛造成伤害。

保养及注意事项

1. 请勿自行拆卸部件, 否则将会导致保修失效并可能损坏手电。

2. 灯具长时间以极亮档位工作会积累大量的热量并及时导出, 因此手电使用中发热是正常现象。

3. 长期使用, 手电螺纹的润滑脂会减少, 为了保持螺纹顺滑, 请及时使用专业消滑脂来润滑螺纹。

4. 长期使用后, 手电的防水圈可能会老化。请您及时更换防水圈以维持手电的防水性能。

5. 请及时清洁手电的导电接触面以保证手电的正常工作尤其是当手电出现异常的闪烁或者无法点亮的时候, 有可能是接触面有污渍导致, 尝试用酒精棉签清洁导电接触面。

6. 由于锂电池会自放电, 所以建议您在长期不使用手电时将电池取出并至少每4个月为电池充电一次。

7. 防护等级IP66, 可防强力喷水, 但禁止浸入水中使用

售后/保修条款

1. 15天保换: ACEBEAM产品自售出日起15天内, 在正常使用的前提下, 如有任何质量问题, 均可向经销商要求免费更换;

2. 10年免费维修: ACEBEAM LED类产品自售出日起10年内, 在正常使用的前提下, 如有任何质量问题, 均可享受免费维修服务;

3. 本条款不适用于以下情况:

A: 人为破坏, 拆解, 改装本产品;

B: 错误操作导致产品损坏 (如电池装反等);

C: 电池漏液导致产品损坏。

4. 如对ACEBEAM产品有任何疑问请参考保修条款并联系当地代理商或发邮件到info@acebeam.com。

免责条款: Acebeam对因不按手册中的警告使用产品而造成的损害或伤害不承担任何责任。